

ACRE COUNTERS . . . . . 5-14	CANOPY . . . . . 2-30	CULTIVATOR: . . . . . 6-8, 6-9	FLYWHEEL . . . . . 4-5
ADAPTERS:	<b>CAPS, DISTRIBUTOR</b> . . . . . 2-1	Coulters . . . . . 6-6, 6-8, 6-10	<b>FOAM CAB</b> . . . . . 2-29
PTO . . . . . 4-14	<b>CAPS, EXHAUST</b> . . . . . 1-33	Gauge wheel tire . . . . . 6-9	FORK LIFT . . . . . 6-23
AIR CONDITIONING:	<b>CAPS, FUEL</b> . . . . . 1-45	Minimum Till . . . . . 6-8	FORKS . . . . . 8-6
Blower motors . . . . . 2-34 thru 2-38	<b>CAPS, RADIATOR</b> . . . . . 1-54,55	Shanks . . . . . 6-3, 6-9	FORK LIFT LOADER . . . . . 6-23
Clutches . . . . . 2-34 thru 2-38	<b>CARBURETOR:</b>	Shovels . . . . . 6-4, 6-6, 6-8, 6-9	ATTACHMENT . . . . . 6-23
Compressors . . . . . 2-34 thru 2-38	<b>Rebuilt</b> . . . . . 1-41	Danish tines . . . . . 6-9	FRONT END PARTS: . . . . . 3-2 thru 3-18
Driers, filter . . . . . 2-34 thru 2-38	<b>New</b> . . . . . 1-41,42	<b>CUSHIONS, SEAT</b> . . . . . 2-38 thru 43	Hubs . . . . . 3-10
Expansion valves . . . . . 2-37 thru 2-38	<b>Kits</b> . . . . . 1-39,40	CUTTING EDGE, BUCKET . . . . . 6-23	IH . . . . . 3-2, 3-3
ALTERNATORS: . . . . . 2-7, 2-8	CHAIN BREAKER . . . . . 7-36	CYLINDER BARS . . . . . 7-13	JD . . . . . 3-4, 3-5
Pulleys . . . . . 2-10	CHAIN ROLLER: . . . . . 7-36	CYLINDERS . . . . . 4-9	Spindles . . . . . 3-6 thru 3-9
ARMS, STEERING . . . . . 3-20, 3-21	Elevator . . . . . 7-19	DANISH TINES . . . . . 6-9	Steering Arms . . . . . 3-17, 3-18
AUGERS, COMBINE: . . . . . 7-21, 7-22	Gathering . . . . . 7-7	<b>DECALS</b> . . . . . 2-52,53	Tie Rods . . . . . 3-11 thru 3-16
Hydro Fold . . . . . 5-13	Feeder . . . . . 7-12	DEPTH AMATIC . . . . . 5-9	<b>FUEL:</b>
BALE SPEARS . . . . . 6-23	CHAINS, BALER . . . . . 6-20	DISC CHIESEL . . . . . 6-10	<b>Caps</b> . . . . . 1-45
BALDWIN FILTERS . . . . . 1-65 thru 1-71	CHAINS, BELT GATHERING . . . . . 6-12	DISC MOWER BLADES . . . . . 6-15	<b>Floats</b> . . . . . 1-47
Skid Loader . . . . . Section 8	CHAINS, ELEVATOR . . . . . 7-19	DISC MOWER PARTS . . . . . 6-16	Injectors . . . . . 1-43
BALER PARTS:	CHAINS, GATHERING . . . . . 7-7	DISC OPENERS	<b>Pumps</b> . . . . . 1-44
Belts . . . . . 6-12, 6-13	<b>CHAINS, PLANTER</b> . . . . . 5-11	Drill . . . . . 5-18	<b>Strainer assembly</b> . . . . . 1-46
Counter . . . . . 6-14	CHAINS, SPREADER . . . . . 6-11	Planter . . . . . 5-2, 5-7, 5-10, 5-16	<b>Tanks</b> . . . . . 1-45
Teeth . . . . . 6-14	CHISEL SPIKES, PARTS . . . . . 6-10	DISC PARTS: . . . . . 6-1 thru 6-5	FURROW SLICERS . . . . . 5-9
Chains . . . . . 6-19	CHOPPER PARTS . . . . . 7-17	Axles . . . . . 6-1	<b>GASKETS</b> . . . . . 1-16 thru 21
<b>BATTERY:</b>	CLAMPS, EXHAUST . . . . . 1-33	Bearings . . . . . 6-2	GATHERING CHAINS . . . . . 7-7
Cables . . . . . 2-2	CLUTCH BEARINGS . . . . . 4-6	Blades . . . . . 6-3	<b>GAUGES</b> . . . . . inside cover, 2-56 to 58
<b>Boxes</b> . . . . . 2-20,21	CLUTCHES . . . . . 4-1 thru 4-4	Clevis . . . . . 6-5	GENERATORS . . . . . 2-8, 2-11, 2-12
BLADES, ROTARY CUTTER . . . . . 6-17	COILS, IGNITION . . . . . 2-1	Hubs & Spindles . . . . . 6-5	<b>GLASS, CAB</b> . . . . . 2-33
BEARINGS:	COMPRESSORS,	Scrapers . . . . . 6-3	<b>GRAIN DRILL PARTS</b> . . . . . 5-16,17
Cultivator . . . . . 6-9	AIR CONDITIONING . . . . . 2-35 thru 38	Spools . . . . . 6-1	<b>GRAPHITE</b> . . . . . 5-11
Disc . . . . . 6-2	CONTROLS, TRANS . . . . . 4-11	<b>DISTRIBUTORS</b> . . . . . 2-17	<b>GRILLS</b> . . . . . 2-45 to 47
Engine . . . . . 1-22 thru 24	COULTER BLADES . . . . . 5-11	<b>DISTRIBUTOR PARTS:</b> . . . . . 2-1	GUARDS:
Kits, Disk . . . . . 6-4	COUNTER BALE . . . . . 6-15	DIESEL INJECTORS . . . . . 1-43	Combine . . . . . 6-20
Pilot Throw Out . . . . . 4-6	CYLINDER HEADS . . . . . 1-12, 1-13	DRAW BARS . . . . . 3-25	Mower . . . . . 6-20
Roller . . . . . 7-37	CYLINDER, HYDRAULIC . . . . . 4-8, 7-23	<b>DRILL PARTS:</b> . . . . . 5-15 & 16	Mower Conditioner . . . . . 6-20
Timken . . . . . 7-37	CLUTCH:	JD 750 . . . . . 5-16	<b>HALOGEN LIGHTS</b> . . . . . 2-23
Wheels Front Tractor . . . . . 3-22	Air Conditioning . . . . . 2-35 thru 38	<b>Sensors</b> . . . . . 5-17 & 18	<b>HARNES, PLANTER</b> . . . . . 5-18
<b>BELTS:</b>	Bearings . . . . . 4-5	ELECTRONICS . . . . . 6-21	HARROW TEETH . . . . . 6-7
Baler . . . . . 6-12, 6-13	Drive disc . . . . . 4-1 thru 4-5	<b>ELECTRICAL:</b>	<b>HEADS, CYLINDER</b> . . . . . 1-10 to 15
Combine . . . . . 7-25 thru 7-35	Mower . . . . . 6-18	Alternators . . . . . 2-3,7,8	<b>HEADLIGHTS</b> . . . . . 2-24
Tractor . . . . . 2-9	Parts . . . . . 4-1 thru 4-5	Alternator kits . . . . . 2-3	<b>HEAT HOUSERS</b> . . . . . 2-30
BLADES:	Plates . . . . . 4-1 thru 4-4	Conversion kits to 12 Volt . . . . . 2-3	<b>HEATERS, ENGINE</b> . . . . . 1-57
Chisel Plow . . . . . 6-10	Pressure plate . . . . . 4-1 thru 4-4	<b>Caps, Distributor</b> . . . . . 2-1	HITCH:
Coulter . . . . . 5-10,13,17	PTO disc . . . . . 4-14	Drives . . . . . 2-14 thru 16	3-Point . . . . . 3-21 thru 3-30
Disk . . . . . 6-10,17	COMBINE PARTS:	<b>Gauges</b> . . . . . inside cover, 2-56 to 58	Add on . . . . . 3-30
Drill . . . . . 5-15, 5-16	Augers/Loading . . . . . 7-21	Generators . . . . . 2-11, 12	Hitch IH . . . . . 3-21, 3-22, 3-23
Planter opener . . . . . 5-8,10,12	Augers/Unloading . . . . . 7-22, 7-23	Glow Plugs . . . . . Sect 8	Pins . . . . . 3-26, 3-29
Rotary Mower . . . . . 6-17	Bars, cylinder . . . . . 7-13	<b>Light Halogen</b> . . . . . 2-23	Third links . . . . . 3-28, 3-29
BLOCKS IDLER . . . . . 7-36	Belts . . . . . 7-25 thru 7-31	Motors, Blower . . . . . 2-34 thru 2-38	HONDA ENGINES . . . . . 1-60
BLOWER MOTORS . . . . . 2-29 thru 2-32	Chopper Knives . . . . . 7-17	Regulators . . . . . 2-13	<b>HOODS</b> . . . . . 2-45,46
BOLTS, Shovel: . . . . . 6-4	Concave . . . . . 7-14	<b>Solenoids</b> . . . . . 2-10, 19	HUB:
Rod . . . . . 1-2, 1-17	Cornhead JD . . . . . 7-6	Starters . . . . . 2-14 thru 2-18	Disc . . . . . 6-5
BOOKS: IT Manuals . . . . . 1-72 thru 74	Cornhead IH . . . . . 7-4	<b>Switches</b> . . . . . 2-10, 22	Front end . . . . . 3-10
BOOTS, SHIFTER . . . . . 4-13	Cornhead MF . . . . . 7-8	<b>EMBLEMS</b> . . . . . 2-50,51	Universal . . . . . 3-20
<b>BOWLS, PRECLEANER</b> . . . . . 1-46	Crankshafts . . . . . 7-15	<b>ENGINE:</b>	HYDRAULIC:
BOX TOPPERS . . . . . 5-7	Gathering chains . . . . . 7-7	Briggs Stratton . . . . . 1-59	Coupling . . . . . 4-8, 8-1
BRAKES:	Guards . . . . . 6-21	Camshafts . . . . . 1-2, 26	Cylinders . . . . . 4-9
Assemblies . . . . . 4-12	Drums . . . . . 7-12	Cam bearings . . . . . 1-25	Kits, Hyd. Skidsteer Cylinder . . . . . 8-1
Bands . . . . . 4-12	Idler pulleys . . . . . 7-34	Coolers . . . . . 1-56	Pumps . . . . . 4-6, 4-7, 7-29
Lining sets . . . . . 4-12	Idler sprockets, Cornhead . . . . . 7-7	Crankshafts . . . . . 1-29	Stops . . . . . 4-9
Parts . . . . . 4-12	Rotary IH . . . . . 7-11	<b>Dampeners</b> . . . . . 1-6	Tips . . . . . 4-8, 8-1
Shoes . . . . . 4-12	Elevator chains . . . . . 7-19	<b>Gaskets</b> . . . . . 1-16 thru 21	Valves . . . . . 4-7, 4-8, 4-9
BREATHERS . . . . . 1-22	Elevator housings . . . . . 7-18	<b>Heads</b> . . . . . 1-11 thru 15	IDLERS, COMBINE . . . . . 7-36
BUCKETS LOADER, SKID 6-22, 8-7	Feeder chains . . . . . 7-12	Honda engines . . . . . 1-60	<b>IGNITION:</b>
BUCKET CUTTING EDGE . . . . . 6-23	Knives, cornhead . . . . . 7-10	<b>IH Overhaul Kits</b> . . . . . 1-2,4,5	<b>Cable sets</b> . . . . . 2-1
BUCKET TOOTH BAR . . . . . Sect 8	Pans grain . . . . . 7-15	JD Overhaul Kits . . . . . 1-1	<b>Coils</b> . . . . . 2-1, 2-2
BUSHINGS ROD . . . . . 1-24	Pumps . . . . . 7-36	Kubota Overhaul Kits . . . . . 8-2	<b>Parts</b> . . . . . 2-1 thru 4
<b>CAB ACCESSORIES:</b>	Rotor, IH . . . . . 7-11	<b>Kits engine overhaul</b> . . . . . 1-1 thru 5	<b>Switches</b> . . . . . 2-22
Blower Motors . . . . . 2-34 thru 38	Shafts . . . . . 7-24	<b>Main Bearings</b> . . . . . 1-22,23	<b>Ignitor, Pointless</b> . . . . . 2-4 to 6
<b>Door Frame</b> . . . . . 2-30	Sickles . . . . . 7-1	Rings . . . . . 1-9	IH FRONT ENDS . . . . . 3-4, 3-5
Handles . . . . . 2-30	Sieves . . . . . 7-16	Rod Bearings . . . . . 1-22,23	IH HITCH . . . . . 3-21 thru 3-23
<b>Heathousers</b> . . . . . 2-30	Sickle sections . . . . . 7-2	Rods . . . . . 1-24	INJECTOR FUEL . . . . . 1-43
Heater . . . . . 2-31	Sprockets . . . . . 7-20, 7-36	<b>Seals, Main</b> . . . . . 1-25	INJECTORS, ETHER . . . . . 1-43
<b>Foam/Foam Kits</b> . . . . . 2-29	Straw walkers . . . . . 7-15	Sleeves & Pistons . . . . . 1-7	JACKS:
<b>Glass</b> . . . . . 2-33	Snoots Cornhead . . . . . 7-9	Valves . . . . . 1-27,28	Implement . . . . . 6-21
<b>Mats, Floor</b> . . . . . 2-29	Spindlers . . . . . 7-18	<b>ENGINE BEARINGS</b> . . . . . 1-22,23	JD 2 CYLINDER PARTS . . . . . 3-7 & 8
<b>Mirrors</b> . . . . . 2-27	JD Snoots . . . . . 7-9	<b>ENGINE HEATERS</b> . . . . . 1-57	JD PONY MOTOR COILS . . . . . 2-1
Top Soundgard . . . . . 2-38	IH Snoots . . . . . 7-9	EXHAUST ELBOWS . . . . . 1-32	JD FRONT ENDS . . . . . 3-1, 3-2
Trays . . . . . 2-30	MF Snoots . . . . . 7-9	<b>EXHAUST PARTS</b> . . . . . 1-30 thru 38	<b>KEYS, SWITCH</b> . . . . . 2-22
CABLES: Battery . . . . . 2-2	Wear bars . . . . . 7-14	<b>FAN, ENGINE</b> . . . . . 1-56	<b>KITS:</b>
<b>Choke</b> . . . . . 1-25	<b>COOLING SYSTEM</b> . . . . . 1-58 thru 64	<b>FENDERS</b> . . . . . 2-48,49	Bearing Front Tractor . . . . . 3-20
<b>Tachometer</b> . . . . . 2-58	COUPLER:	FERTILIZER, TUBES . . . . . 5-12	<b>Carb</b> . . . . . 1-39,40
CAMSHAFT . . . . . 1-2,26	PTO overrunning . . . . . 4-12	FILTERS . . . . . 1-65 thru 71	<b>Engine</b> . . . . . 1-1 thru 5
	CRANKSHAFTS . . . . . 1-25	Skid Steer Loader . . . . . 8-3,8-4	<b>Tuneup</b> . . . . . 2-1 thru 6

We make  
ordering easy  
1-800-634-4885

# INDEX

All of the parts in this catalog are quality  
replacement parts and are not affiliated in any  
way with the original equipment manufacturers.

**KNIVES:**  
Cornhead . . . . . 7-10  
Rotary Mower . . . . . 6-17  
Rotary Disc . . . . . 6-15  
Sections . . . . . 6-18, 7-1, 7-2  
Sickles . . . . . 6-18, 7-1  
**LATCHES, RUBBER** . . . . . 7-16  
**LAWN & GARDEN SECTION 9**  
Carb kits . . . . . 9-2  
Filters . . . . . 9-3 & 4  
Seats . . . . . 9-14  
**LIFTERS, VALVE** . . . . . 1-27, 28  
**LIGHTS:**  
Antique . . . . . 2-24, 25  
Flashing . . . . . 2-26  
Halogen . . . . . 2-23  
Tractor . . . . . 2-23 thru 26  
Strobe . . . . . 2-26  
Switches . . . . . 2-22  
**LOADER:** . . . . . 6-22, 6-23, 8-6, 8-7  
Bale Spears . . . . . 6-23  
Buckets . . . . . 6-22, 8-7  
Front Forks . . . . . 6-22, 8-6  
Skid Steer Mount Plates . . . . . 8-8  
Quicktatch . . . . . 6-22, 8-7  
**LOAD SHAFT/BUSHINGS** . . . . . 3-28  
**MAIN BEARINGS** . . . . . 1-22, 23  
**MAIN SEALS** . . . . . 1-25  
**MANIFOLDS** . . . . . 1-30 thru 32  
**MANUALS, REPAIR** . . . . . 1-72 thru 74  
**MAST 3 PT FORKLIFT** . . . . . 6-23  
**MARKERS:**  
Notched . . . . . 5-12  
Weights . . . . . 5-10  
**MIRRORS** . . . . . 2-27  
**MATS, FLOOR** . . . . . 2-29  
**METER MAN** . . . . . 5-15  
**MOISTURE TESTER** . . . . . 6-21  
**MOWER:**  
Guards . . . . . 6-18, 6-20  
Knives, sections . . . . . 6-18  
Knife clips . . . . . 6-18  
**Lawn** . . . . . Section 9  
Rotary, blades . . . . . 6-17  
Rotary Disc Mower Blades . . . . . 6-15  
Wear plates . . . . . 6-18  
**MUFFLERS** . . . . . 1-35 thru 37  
**NEW PRODUCTS** . . . . . inside covers  
**NO TILL/ATTACH** . . . . . 5-1, 5-10  
**OIL:**  
Coolers . . . . . 1-6  
Filters . . . . . 1-65 thru 71  
Gauges . . . . . 2-56  
**OVERHAUL KITS** . . . . . 1-1 thru 5  
**OVER-RUNNING COUPLERS** . . . . . 4-12  
**P.T.O. SHAFTS** . . . . . 4-12  
**PAINT** . . . . . 2-28  
**PANS GRAIN MF COMBINE** . . . . . 7-15  
**PINS, HITCH** . . . . . 3-16, 3-29  
**PIPES EXHAUST** . . . . . 1-35 thru 38  
**PISTON & SLEEVE**  
ASSEMBLY . . . . . 1-7  
**PITMAN STICKS** . . . . . 6-18  
**PLANTER PARTS:** . . . . . Section 5  
Graphite . . . . . 5-11  
JD Row Unit . . . . . 5-2, 5-3  
**Seed Sensors** . . . . . 5-18  
Springs . . . . . 5-5  
**PLOW: Chisel, Disc Chisel, SubSoiler**  
Blades . . . . . 6-10  
Bolts . . . . . 6-4, 6-10  
Chisel points . . . . . 6-10  
Frog, Soil Saver . . . . . 6-10  
Moldboards, soilsaver . . . . . 6-10  
Subsoiler . . . . . 6-6  
**PLUGS, SPARK** . . . . . 2-2  
**POLY SKIDS** . . . . . 7-2  
**POLYTIN** . . . . . 7-10  
**POINTS, IGNITION** . . . . . 2-3

**POWER STEERING UNITS** . . . . . 4-6  
**PRESSURE PLATES** . . . . . 4-1 thru 4-4  
**PTO:**  
Implement . . . . . 4-12  
Implement . . . . . 6-21  
**PULLEYS, ALTERNATOR** . . . . . 2-10  
**PULLERS, GEAR** . . . . . 7-6  
**PUMPS:**  
Fuel . . . . . 1-44  
Hydraulic . . . . . 4-6, 4-7, 4-8, 7-33  
Water . . . . . 1-58 thru 64  
**PYROMETERS** . . . . . 2-58  
**QUICK ATTACH BUCKET** . . . . . 6-25, 8-7  
**RADIATOR:** . . . . . 1-49 thru 52  
Cores JD . . . . . 3-1  
Caps . . . . . 1-54, 55  
Hoses . . . . . 1-52 thru 54  
**RADIOS** . . . . . 2-54, 55  
**RAKE TEETH** . . . . . 6-14, 6-19  
**REGULATORS:**  
Voltage . . . . . 2-7, 2-13  
**REEL PARTS** . . . . . 7-3  
**REPAIR MANUALS** 1-56, 1-57, 1-58  
**RESISTORS** . . . . . 2-1  
**RIMS & WHEELS** . . . . . 3-19, 3-20  
**RIDGE TILL PARTS** . . . . . 6-8  
**RINGS, ENGINE** . . . . . 1-9  
**RODS, ENGINE** . . . . . 1-24  
**ROLLS CORNHEAD** . . . . . 7-6, 7-10  
**ROTOR, IH** . . . . . 7-11  
**ROTORS, IGNITION** . . . . . 2-3  
**ROTARY MOWER KNIVES** . . . . . 6-17  
**ROTARY HOE WHEELS** . . . . . 6-7  
**ROW DIVIDERS** . . . . . 7-9, 7-14  
**SAFETY ITEMS** . . . . . 2-26  
**SCRAPER, DRILL** . . . . . 5-8  
**SCRAPER, DISC** . . . . . 6-3  
**SCRAPER, PLANTER** . . . . . 5-8  
**SCREENS, SIDE** . . . . . 2-47  
**SEALED BEAMS** . . . . . 2-23  
**SEALS, MAIN** . . . . . 1-25  
**SEAT CUSHIONS:** . . . . . 2-38 thru 43  
Seat Springs . . . . . 2-44  
Skid Steer . . . . . 8-5  
Undercarriages . . . . . 2-42, 44  
**SENSOR, SEED** . . . . . 5-18  
**SECTIONS:**  
Bolt-on parts . . . . . 7-2  
Combine . . . . . 7-1  
Mower . . . . . 6-18  
**SEDIMENT BOWLS** . . . . . 1-40  
**SEED SENSORS** . . . . . 5-18  
**SHANK CULTIVATOR** . . . . . 6-3  
**SHEET METAL** . . . . . 2-45 to 49  
**SHIELDS, PTO** . . . . . 4-12  
**SHIFT PARTS** . . . . . 4-11  
**SHOP MANUALS** . . . . . 1-72 thru 74  
**SHOVELS, TILLAGE** . . . . . 6-4, 6, 8, 9  
**SICKLES:**  
Mowers . . . . . 6-18  
Combine . . . . . 7-1  
**SIDE SCREENS, JD** . . . . . 2-47  
**SIDE SHIELDS, JD** . . . . . 2-47  
**SIEVES** . . . . . 7-16  
**SKID LOADER** . . . . . SECTION 8  
Adapters . . . . . SECTION 8  
Buckets . . . . . 8-1  
Filters . . . . . 8-5 & 6  
Fittings . . . . . SECTION 8  
Forks . . . . . 8-2  
Quick tatch for non QT loaders . . . . . 8-1  
Rims . . . . . SECTION 8  
Radiators . . . . . 8-7  
Seal kits, cylinder . . . . . 8-10  
Seats . . . . . 8-11  
Tilt meters . . . . . SECTION 8  
Toothbars . . . . . SECTION 6  
**SLEEVE & PISTON** . . . . . 1-7  
**SLIP CLUTCH DISCS** . . . . . 6-16  
**SMV SIGNS** . . . . . 2-26

**SOLENOID SWITCHES** . . . . . 2-19  
**SPARK PLUGS** . . . . . 2-2  
**SPARK PLUG WIRE** . . . . . 2-1, 2  
**SPEARS BALE** . . . . . 6-23  
**SPIKES, CHISEL & TWISTED** . . . . . 6-10  
**SPINDLES:** . . . . . 3-6 thru 3-9  
Implement . . . . . 3-20  
**SPREADER, APRONS** . . . . . 6-11  
**SPREADER, CHAFF** . . . . . 7-18  
**SPROCKETS COMBINE**  
ELEVATORS . . . . . 7-20  
**SPRING TEETH** . . . . . 6-7  
**STACKS, EXHAUST** . . . . . 1-34  
**STARTERS:** . . . . . 2-14 thru 18  
Drives . . . . . 2-14 thru 16  
Rings . . . . . 4-5  
Starter switches . . . . . 2-10, 2-19  
Starting Fluid Injectors . . . . . 1-43  
**STEERING PARTS:** . . . . . 3-3 thru 3-11  
Arms . . . . . 3-17, 3-18  
Steering wheel spinner . . . . . 2-31  
Steering wheels . . . . . 2-31  
Steering wheel caps . . . . . 2-32  
**STEPS, TRACTOR** . . . . . 2-27  
**STOPS, HYDRAULIC CYL** . . . . . 4-9  
**STRAINERS, FUEL** . . . . . 1-46  
**SUBSOILER POINTS** . . . . . 6-6  
**SWAY BLOCKS** . . . . . 3-29  
**SWAY LIMITERS** . . . . . 7-18  
**SWEEPS** . . . . . 6-4, 6-6, 6-8, 6-9  
**SWITCHES, IGNITION** . . . . . 2-22  
**TAPPETS** . . . . . 1-2, 26  
**TACHOMETERS** . . . . . 1-64, 2-57  
**TAIL LIGHTS** . . . . . 2-25  
**TANK FUEL** . . . . . 1-45  
**TEETH, SPRING:**  
Baler . . . . . 6-14  
Drill . . . . . 6-7  
Harrow . . . . . 6-7  
Rake . . . . . 6-14  
Reel . . . . . 7-3  
**TESTERS:**  
Grain Moisture . . . . . 6-21  
Seed Sensor . . . . . 5-17  
**THIRD LINKS** . . . . . 3-28, 3-29  
**THROTTLE PARTS** . . . . . 1-44  
**THROWOUT BEARING** . . . . . 4-5  
**TIE RODS** . . . . . 3-11 thru 3-16  
**TILT METERS** . . . . . 8-8  
**TIRES:**  
Drill . . . . . 5-16  
Cult . . . . . 6-9  
**TOOL BOX, TRACTOR** . . . . . 2-28  
**TOOTHBAR** . . . . . SECTION 8  
**TOP LINKS** . . . . . 3-28, 3-29  
**TORQUE AMPLIFIERS** . . . . . 4-4  
**TRAYS, CAB** . . . . . 2-28  
**TUBES, UNLOADING** . . . . . 7-22  
**TUNE-UP KITS** . . . . . 2-3  
**TURBO CHARGERS** . . . . . 1-48  
Sleeves . . . . . 1-48  
**TWO CYLINDER JD** . . . . . 3-1  
**UNDERCARRIAGE SEAT** . . . . . 2-42, 44  
**UNLOADING AUGER** . . . . . 7-22, 7-23  
**UNIVERSAL SKIDSTEER**  
MOUNT PLATE . . . . . SECTION 8  
**UMBRELLA CANOPY** . . . . . 2-30  
**V SLICER** . . . . . 5-1, 9  
**VALVES, ENGINE** . . . . . 1-27, 28  
**VALVES, HYDRAULIC** . . . . . 4-8  
**VIDEOS TRACTOR REPAIR** . . . . . 1-71  
**VOLTAGE REGULATORS** . . . . . 2-7, 2-13  
**WARNING LIGHTS** . . . . . 2-26  
**WATER PUMPS** . . . . . 1-58 to 64  
**WEAR BARS IH ROTOR** . . . . . 7-14  
**WEATHER CAPS** . . . . . 1-33  
**WHEELS:** . . . . . 3-19, 3-20  
Steering . . . . . 2-31



ORDER # THET  
PRICE \$12.95

Show your passion for the  
manufacturer you like best  
with a T.H.E. shirt. The front  
contains Tom Hassenfritz  
Equipment Company and  
"Restoring The U.S. One Old  
Tractor At A Time". The back  
features one of the brand logos  
above. When ordering please  
specify which manufacturer  
and size you would like.

Don't see it listed above? Give us a call and see if we can find it for you.

Warranty is limited to the replacement cost of the part purchased.